

Epson Premium Glossy Photo Paper - photo paper - glossy - 15 sheet(s) - A4



På lager(46)

SKU	C13S042155
Produktbeskrivelse:	Epson Premium Glossy Photo Paper - fotopapir - skinnende - 15 ark - A4
Produkttype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelse:	A4 (210 x 297 mm)
Udskriftsteknik:	Blækprinter
Antal inkluderet:	15 ark
Kompatibel med:	EcoTank ET-16500, 2600, 2650, 2750, 2751, 2756, 2850, 2851, 2856, 3750, 4750, 4850, 7700, 7750; Expression Home XP-245, 247, 255, 257, 342, 345, 352, 355, 442, 445, 452, 455; Expression Home HD XP-15000; Expression Premium XP-540, 6000, 6005, 6100, 6105, 645, 900; SureColor P800; WorkForce WF-3620

Medie

Medietype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelser:	A4 (210 x 297 mm)
Udskriftsteknik:	Blækprinter
Antal inkluderet:	15 ark

Oplysninger om kompatibilitet

Oplysninger om kompatibilitet

Epson L130, L220, L310, L355, L365, L555, L565, L655, L810, MUFC Printer | Epson EcoTank ET-14000, ET-16500, ET-2600, ET-2650, ET-2650 Unlimited, ET-2750, ET-2750U, ET-2751, ET-2756, ET-2850, ET-2850U, ET-2851, ET-2856, ET-3750, ET-4500, ET-4750, ET-4750 Unlimited, ET-4750U, ET-4850, ET-4850U, ET-7700, ET-7750 | Epson Expression Home XP-102, XP-202, XP-205, XP-212, XP-215, XP-225, XP-235, XP-245, XP-247, XP-255, XP-257, XP-30, XP-305, XP-312, XP-315, XP-322, XP-325, XP-342, XP-345, XP-352, XP-355, XP-402, XP-405, XP-415, XP-422, XP-425, XP-432, XP-435, XP-442, XP-445, XP-452, XP-455, XP-530 | Epson Expression Home HD XP-15000 | Epson Expression Photo XP-55, XP-750, XP-760, XP-850, XP-860, XP-950, XP-960 | Epson Expression Premium XP-530, XP-540, XP-540 Media Bundle, XP-6000, XP-6005, XP-605, XP-610, XP-6100, XP-6105, XP-615, XP-620, XP-630, XP-635, XP-640, XP-645, XP-810, XP-900, XP-900 Stickers | Epson Stylus C79, D120, D120 Network Edition, D120 Professional Edition, D92, DX3800plus, DX4400, DX4450, DX7000F, DX7400, DX7450, DX8400, DX8450, DX9400F, Pro 3880, Pro 3880 Mirage Edition, S20, S21, SX100, SX105, SX110, SX115, SX130, SX200, SX205, SX210, SX215, SX235W, SX400, SX400 WiFi Edition, SX405, SX405 WiFi Edition, SX410, SX415, SX435W, SX445W, SX510W, SX515W, SX535WD, SX600FW, SX610FW | Epson Stylus Color 600Q | Epson Stylus Office B1100, B40W, B42WD, BX300F, BX305F, BX310FN, BX320FW, BX600FW, BX610FW, BX635FWD, BX925FWD | Epson Stylus Photo 1400, 1500W, P50, PX650, PX660, PX700W, PX710W, PX730WD, PX800FW, PX810FW, PX830FWD, R1900, R2000, R265, R270, R285, R2880, R3000, R360, R390, RX560, RX585, RX590, RX685 | Epson SureColor P400, P600, P800 Designer Edition, SC-P400, SC-P600, SC-P800 | Epson WorkForce WF-100W, WF-2010W, WF-2630, WF-2630WF, WF-2650DWF, WF-2660DWF, WF-2750DWF, WF-2760DWF, WF-3620DWF, WF-3620DWF Stickers, WF-3640DTWF, WF-7110DTW, WF-7515, WF-7610DWF | Epson WorkForce Pro WF-4630DWF, WF-4640DTWF

Kompatibel
med:



