

Epson Premium Glossy Photo Paper - photo paper - glossy - 30 sheet(s) - 130 x 180 mm - 255 g/m²



På lager(2)

SKU	C13S042154
Produktbeskrivelse:	Epson Premium Glossy Photo Paper - fotopapir - skinnende - 30 ark - 130 x 180 mm - 255 g/m²
Produkttype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelse:	130 x 180 mm
Udskriftsteknik:	Blækprinter
Medievægt:	255 g/m²
Antal inkluderet:	30 ark

Medie

Medietype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelser:	130 x 180 mm
Udskriftsteknik:	Blækprinter
Antal inkluderet:	30 ark
Medievægt:	255 g/m²

Oplysninger om kompatibilitet



Oplysninger om kompatibilitet

Kompatibel
med:

Epson L130, L220, L310, L355, L365, L555, L565, L655, L810, MUFC Printer | Epson EcoTank ET-14000, ET-16500, ET-1810, ET-2600, ET-2650, ET-2650 Unlimited, ET-2710, ET-2710 Unlimited, ET-2711, ET-2712, ET-2714, ET-2715, ET-2720, ET-2720 All-in-One Supertank Printer, ET-2720 Unlimited, ET-2721, ET-2721 Unlimited, ET-2726, ET-2750, ET-2750U, ET-2751, ET-2756, ET-2810, ET-2811, ET-2812, ET-2814, ET-2815, ET-2820, ET-2821, ET-2825, ET-2826, ET-2850, ET-2850U, ET-2851, ET-2856, ET-3750, ET-4500, ET-4700, ET-4700 Unlimited, ET-4750, ET-4750 Unlimited, ET-4750U, ET-4800, ET-4850, ET-4850U, ET-7700, ET-7750 | Epson Expression Home XP-102, XP-202, XP-205, XP-212, XP-215, XP-225, XP-235, XP-245, XP-247, XP-30, XP-305, XP-312, XP-315, XP-322, XP-325, XP-342, XP-345, XP-402, XP-405, XP-415, XP-422, XP-425, XP-432, XP-435, XP-442, XP-445, XP-530 | Epson Expression Home HD XP-15000 | Epson Expression Photo XP-55, XP-750, XP-760, XP-850, XP-860, XP-950, XP-960 | Epson Expression Premium XP-530, XP-540, XP-540 Media Bundle, XP-6000, XP-6005, XP-605, XP-610, XP-615, XP-620, XP-630, XP-635, XP-640, XP-645, XP-810, XP-900, XP-900 Stickers | Epson Stylus C91, DX9400 WiFi Edition, Pro 3880, Pro 3880 Mirage Edition, SX115, SX130, SX215, SX235W, SX415, SX435W, SX445W, SX515W, SX535WD, SX610FW, T26, T27, T59, TX106, TX109, TX117, TX119, TX209, TX210, TX219, TX409, TX410, TX419, TX550W | Epson Stylus Color 600Q, 900PS | Epson Stylus Office B1100, B42WD, BX305F, BX310FN, BX320FW, BX610FW, BX635FWD, BX925FWD, T1100, TX510FN | Epson Stylus Photo 1500W, P50, PX650, PX660, PX710W, PX730WD, PX810FW, PX830FWD, R2000, R3000, T50, TX650, TX710W | Epson SureColor P400, P600, P800 Designer Edition, SC-P400, SC-P600, SC-P800 | Epson WorkForce WF-100W, WF-2010W, WF-2630, WF-2630WF, WF-2650DWF, WF-2660DWF, WF-2750DWF, WF-2760DWF, WF-3620DWF, WF-3620DWF Stickers, WF-3640DTWF, WF-7110DTW, WF-7515, WF-7610DWF | Epson WorkForce Pro WF-4630DWF, WF-4640DTWF

