

Epson Ultra Glossy Photo Paper - photo paper - glossy - 20 sheet(s) - 100 x 150 mm



På lager(12)

SKU	C13S041926
Produktbeskrivelse:	Epson Ultra Glossy Photo Paper - fotopapir - skinnende - 20 ark - 100 x 150 mm
Produkttype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelse:	100 x 150 mm
Udskriftsteknik:	Blækprinter
Antal inkluderet:	20 ark
Kompatibel med:	EcoTank ET-1810, 2710, 2711, 2712, 2714, 2715, 2720, 2721, 2726, 2750, 2751, 2756, 2810, 2811, 2812, 2814, 2815, 2820, 2821, 2825, 2826, 2850, 2851, 2856, 4700, 4750, 4800, 4850; Expression Home XP-255, 257, 352, 355, 452, 455; Expression Home HD XP-15000; Expression Premium XP-6005, 6100, 6105

Medie

Medietype:	Fotopapir
Overfladefinish:	Skinnende
Mediестørrelser:	100 x 150 mm
Udskriftsteknik:	Blækprinter
Antal inkluderet:	20 ark

Oplysninger om kompatibilitet

Oplysninger om kompatibilitet

Kompatibel
med:

Epson EcoTank ET-1810, ET-2710, ET-2710 Unlimited, ET-2711, ET-2712, ET-2714, ET-2715, ET-2720, ET-2720 All-in-One Supertank Printer, ET-2720 Unlimited, ET-2721, ET-2721 Unlimited, ET-2726, ET-2750, ET-2750U, ET-2751, ET-2756, ET-2810, ET-2811, ET-2812, ET-2814, ET-2815, ET-2820, ET-2821, ET-2825, ET-2826, ET-2850, ET-2850U, ET-2851, ET-2856, ET-3750, ET-4700, ET-4700 Unlimited, ET-4750, ET-4750 Unlimited, ET-4750U, ET-4800, ET-4850, ET-4850U, ET-7700, ET-7750 | Epson Expression Home XP-202, XP-205, XP-212, XP-215, XP-225, XP-235, XP-235A, XP-245, XP-247, XP-255, XP-257, XP-342, XP-345, XP-352, XP-355, XP-405, XP-415, XP-422, XP-432, XP-435, XP-442, XP-445, XP-452, XP-455, XP-530 | Epson Expression Home HD XP-15000 | Epson Expression Photo XP-55, XP-750, XP-760, XP-850, XP-860, XP-950, XP-960 | Epson Expression Premium XP-530, XP-540, XP-540 Media Bundle, XP-6000, XP-6005, XP-605, XP-610, XP-6100, XP-6105, XP-615, XP-620, XP-630, XP-635, XP-640, XP-645, XP-810, XP-900, XP-900 Stickers | Epson PictureMate 260 | Epson Stylus D120, D88, DX3800, DX3850, DX4000, DX4050, DX4250, DX4400, DX4450, DX4800, DX4850, DX5000, DX6000, DX6050, DX7000F, DX7400, DX7450, DX8400, DX8450, DX9400F, Pro 3880, Pro 3880 Mirage Edition, S20, S21, SX100, SX105, SX110, SX115, SX130, SX200, SX205, SX210, SX215, SX235W, SX400, SX405, SX410, SX415, SX435W, SX445W, SX510W, SX515W, SX535WD, SX600FW, SX610FW | Epson Stylus Office B1100, B40W, B42WD, BX300F, BX305F, BX310FN, BX320FW, BX600FW, BX610FW, BX635FWD, BX925FWD | Epson Stylus Photo 1400, PX650, PX660, PX700W, PX710W, PX730WD, PX810FW, PX830FWD, R1800, R1900, R2400, R285, R2880, RX520, RX560, RX585, RX620, RX640, RX685, RX700 | Epson SureColor P800 Designer Edition, SC-P800 | Epson WorkForce WF-2010W, WF-2630, WF-2630WF, WF-2650DWF, WF-2660DWF, WF-2750DWF, WF-2760DWF, WF-3620DWF, WF-3620DWF Stickers, WF-3640DTWF, WF-7110DTW, WF-7515, WF-7610DWF | Epson WorkForce Pro WF-4630DWF, WF-4640DTWF

Oplysninger om kompatibilitet

